


# OPTIMA 201

## WALL MOUNTED, GAS COMBINATION BOILER

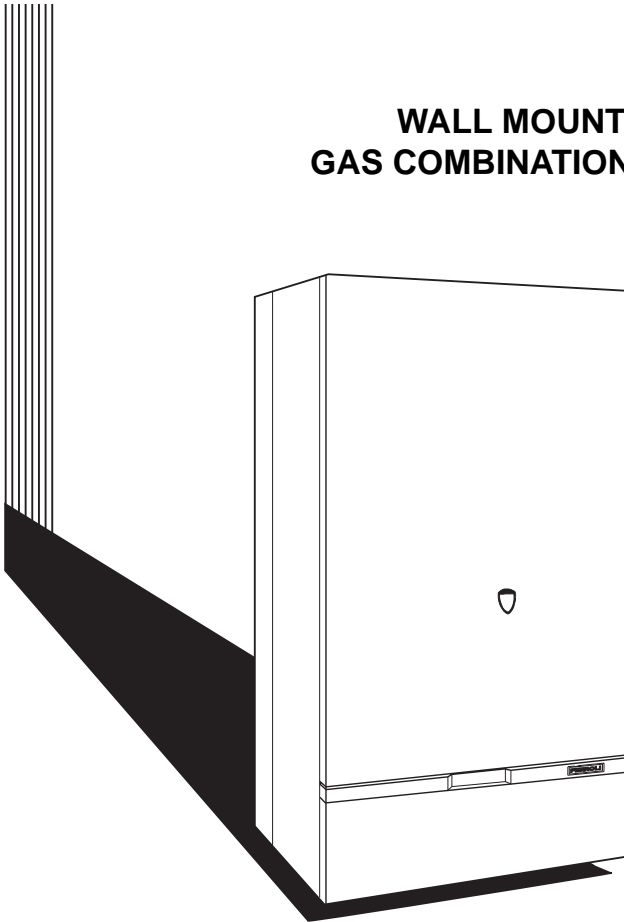

## USER INSTRUCTIONS

W.R.C. No. 9207075

LEAVE THESE INSTRUCTIONS  
ADJACENT TO THE GAS METER

**FERROLI HELPLINE**  
FOR SERVICE INFORMATION OR  
HELP TELEPHONE: 0121 313 1030  
ALWAYS QUOTE  
YOUR SERIAL NUMBER  
FOR IMMEDIATE ASSISTANCE

Appr. Nr. B94.05T CE 0063AQ2150


Phone numbers:

Installer \_\_\_\_\_

Service Engineer \_\_\_\_\_

Serial No. \_\_\_\_\_

### DIGITAL CLOCK

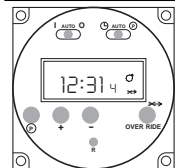

ALL SPECIFICATIONS SUBJECT TO CHANGE

Stockton Close, Minworth Industrial Park, Minworth, Sutton Coldfield, West Midlands B76 8DH  
Tel.: 0121/3523500 - Fax 0121/3523510

## Conditions of Installation

### GAS SUPPLY


It is the law that all gas appliances are installed and serviced by a competent person in accordance with the Gas Safety Regulations (Installation & Use) 1994, and the manufacturers instructions. Failure to observe these requirements may lead to prosecution.

### ELECTRICAL SUPPLY 230 V ~ 50 Hz FUSED 3A.

The electrical wiring must be carried out by a qualified electrician.

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminal in the plug. Therefore proceed as follows:

The wire coloured green and yellow must be connected to the terminal in the plug marked with either the letter E or by the earth symbol or coloured green or green and yellow. The wire coloured blue must be connected to the terminal marked either with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked either with the letter L or coloured.

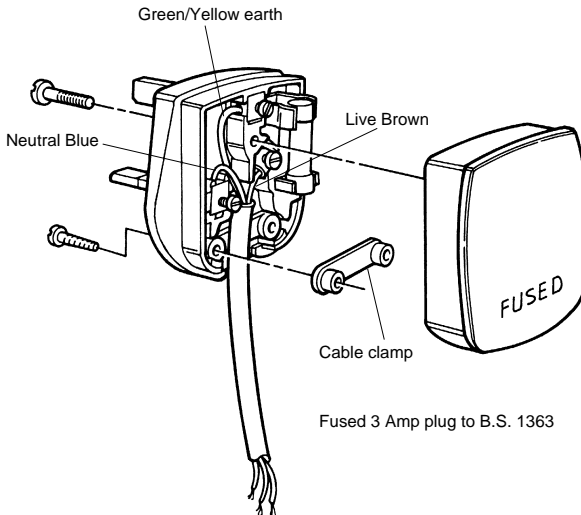


### MINIMUM CLEARANCE

The minimum clearance around the appliance should be as follows:

- Sides 5 mm
- Front 600 mm
- Below 200 mm
- Above 100 mm

**Note:** If a side outlet flue is to be used, a clearance of 75 mm will be needed on the flue outlet side of the boiler.

## Boiler Lighting Instructions

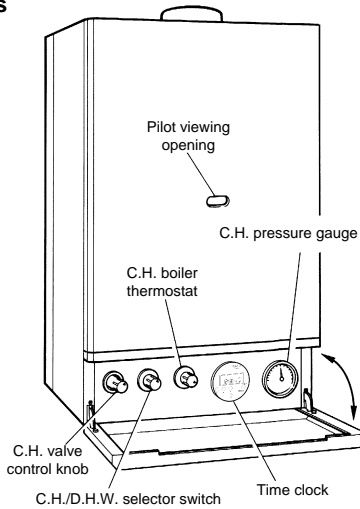

**Important note -  
If the burner stops for C.H.  
only after a waiting time  
of 3 minutes the boiler will  
light again!**

1. Open control panel cover by pulling at either side.
2. Ensure that the C.H./D.H.W. selector switch is set for: "**Heating Continuous and Hot Water**".
3. Ensure that the electricity supply is turned on.
4. Ensure that the heating system is filled with water and has not been drained down. (Pressure gauge should read 1.0 bar minimum).
5. Adjust the room thermostat (if fitted) to a high setting.
6. Adjust the boiler thermostat to its maximum setting. Wait 3 minutes, before continuing.
7. Depress the gas control knob fully (this should operate the electronic ignitor). When the pilot flame is seen to light in the pilot viewing opening, keep the control knob fully depressed for a further 15 seconds, then release it. Should the pilot fail to remain alight, (or go out for any reason), then wait a full 3 minutes before attempting to relight the pilot. Should the pilot still fail to remain alight, turn the boiler off and contact your installer.
8. With the pilot burner established, observe that the main burners cross-light smoothly.
9. Set the time clock, room thermostat (if fitted) and the boiler thermostat to their desired settings.

**Note 1** - The main burner will light whenever a hot tap is turned on.

**Note 2** - If the electricity supply is switched off for any reason, ensure that the pilot burner has remained alight. If the boiler has gone out, follow «**The Boiler Lighting Instructions**» for relighting it.

### To Shut Down The Boiler For Short Periods

1. Set the C.H./D.H.W. selector switch to **hot water**. (In this position the pilot burner will remain alight, and the main burner will only operate when domestic hot water is required).

### To Shut Down The Boiler For Long Periods

1. Turn the gas control knob fully clockwise (approximately 1/12 of a turn). This will turn the pilot burner out.
2. Turn off the electricity supply.

## Boiler Controls

### 1.0 CENTRAL HEATING SELECTOR SWITCH

The central heating selector switch has three positions, these are:

- a) **Heating Timed & Hot Water**  
For domestic hot water supply and central heating controlled by the time clock.
- b) **Hot Water**  
For domestic hot water supply only.
- b) **Heating Continuous & Hot Water**  
**For the domestic hot water supply and continuous central heating.**

Note - When central heating is not required the selector switch must be turned to the position marked "Hot Water".

### 2.0 TIME CLOCK

A time clock is fitted to the boiler to control the Central Heating, this will come into operation when the Selector Switch is turned to the position marked "Heating timed and Hot Water"

### 3.0 TEMPERATURE GAUGE/PRESSURE GAUGE

- a) The temperature gauge shows the approximate temperature of the central heating water **not** the domestic hot water.
- b) The pressure gauge indicates the water pressure in the central heating system. This system must be topped up with water, by your installer or other competent person, as soon as the gauge indicates less than 1.0 bar.

### 4.0 BOILER THERMOSTAT TEMPERATURE SETTING (Central Heating)

The boiler water temperature can be set by the boiler thermostat knob, which is variable from minimum to maximum. This control knob does not affect the temperature of the domestic Hot Water.

### 5.0 DOMESTIC HOT WATER

When any domestic hot water tap is turned on the boiler will provide hot water. At minimum flow rate the water will be approximately 70°C and a maximum flow rate the water will be approximately 40°C (normal running is approximately 60°C).

### 4.0 SERVICING

The boiler must be checked and serviced by your installer or other competent person at least once a year.

## Time Clock

A 24 hour time clock is fitted to the boiler to control the central heating, this will come into operation when the selector switch is turned to the position marked "heating timed and hot water".

	<ul style="list-style-type: none"> <li><b>A</b> Slide switch: set clock - auto - set programme</li> <li><b>B</b> Display. Symbol  in Display = Timer ON</li> <li><b>P</b> Select programme ON/OFF 1.....8</li> <li><b>D</b> Push buttons Time + Time -</li> <li><b>E</b> Override: Boiler will switch ON if boiler is OFF; and OFF if is ON</li> <li><b>F</b> I=Heating continuous - AUTO=Heating timed - O=Heating disabled</li> <li><b>R</b> Reset (with pencil) only with switch <b>A</b> in set clock position</li> </ul>
--	---

### To set time of day

1. Slide switch (A) to left position
2. Using button + and - adjust until the correct time is shown on display (B).

**Pre Set Programmes.** The timer is pre programmed with 3 ON and 3 OFF times.


6:30 - 8:30
12:00 - 12:00
16:30 : 23:30

If these are suitable no programming is required and the slide switch (A) can be moved to the Auto position and the central heating will be ON for these periods. (12:00 - 12:00 will not switch on the boiler)

### To Set Own ON and OFF times. Symbol in Display = ON time

1. Slide switch (A) to right position (P)

Display 

6:30 1 
--


2. Press button (P)

Display 

8:30 2
--------

3. Press button (P)

Display 

12:00 3 
---


4. Press button (P)

Display 

12:00 4
---------

5. Press button (P)

Display 

16:30 5 
---

6. Press button (P)


Display 

22:30 6
---------

7. The timer can be programmed with up to 8 ON and 8 OFF times by repeating the above procedure.

- 1.1 Use buttons + and - to set 1st ON time eg. 6:00

Display 

6:00 1 
--


- 2.1 Use buttons + and - to set OFF time, eg. 9:00

Display 

9:00 2
--------

- 3.1 Use button + and - to set 2nd ON time, eg. 12:30

Display 

12:30 3 
---


- 4.1 Use button + and - to set 2nd OFF time eg. 14:00

Display 

14:00 4
---------

- 5.1 Use button + and - to set 3rd ON time, eg. 16:00

Display 

16:00 5 
---

- 6.1 Use button + and - to set 3rd OFF time eg. 23:30

Display 


23:30 6
---------

8. On completion of programming slide switch (A) to Auto position, the time of day will be displayed and the central heating will switch ON and OFF according to the programme set.

### Over ride

By pressing the over ride button (E) the timer programme is over ridden ie, if programme is in OFF time it will come ON and if in ON time will go OFF.

The timer will revert back to it set programme on reaching the next ON or OFF time.

When the programme is on over ride the sign  will be shown in the display window (B).

### Reset Button

By the use of a pencil the reset button can be pushed (R). This will clear all programmes apart from those factory pre set.

**Reset is only possible with switch (A) in set Clock position!**



## General Notes

### 1.0 SPACE OF GAS

Should a gas leak be suspected, turn off the gas supply at the meter then contact the Local Region of British Gas P.L.C. without delay.

### 2.0 SYSTEM WATER PRESSURE

If the water pressure in the central heating system, as indicated by the pressure gauge, falls below 1.0 bar, contact your installer, Service Engineer or other competent person to top it up.

### 3.0 VENTILATION

If the appliance is installed in a compartment or cupboard, do not obstruct any purpose provided ventilation openings.

Do not use the compartment or cupboard for storage purposes.

### 4.0 FROST PROTECTION

For frost protection of the system (radiator, etc.), a frost thermostat can be fitted, or if the boiler is turned off for long periods contact your installer or other competent person to drain the system. The system must be re-filled by your installer or other competent person.

### 5.0 HIGH LIMIT CUT-OFF THERMOSTAT

The boiler is fitted with a safety overheat cut-off thermostat should it operate, the pilot burner will go out.

Should this happen, wait at least 3 minutes before attempting to re-light the boiler. The boiler should be relight in accordance with the «**Boiler Lighting Instructions**». If the safety overhead cut-off thermostat continues to fail consult your installer, service engineer or other competent person.

- 6.0 If the pump stick, it can usually be freed by removing the chrome centre screw (a small amount of water will escape) and manually free the impeller using a screwdriver in the end of the shaft.

## Simple Checks

If a fault is suspected or discovered, you should contact your installer, service engineer or other competent person. The following list however, is a series of simple checks that should be made before contacting your installer:

- a) Is the plug properly located in the socket and 3 amp fuse intact?
- b) Is the electricity supply switch on?
- c) Is gas supply on and is pilot alight?
- d) Is the room thermostat (if fitted) set high enough?
- e) Is the boiler thermostat set high enough?
- f) Is the time clock in the **ON** position? (i.e. calling for central heating)
- g) Are the radiator valves open?
- h) Is the central heating selector switch set correctly?
- i) Is the pressure on the pressure gauge indicating more than 1 bar?



**IMPORTANT:**

During periods when heating is not required, it is advisable to switch the heating system on periodically (once a fortnight) in order to keep pump from sticking.

If pump does stick, it can usually be freed by removing the chrome center screw, (a small amount of water will escape) and manually free the impeller using a screwdriver in the end of the shaft.

Phone numbers:

Installer \_\_\_\_\_

Service Engineer \_\_\_\_\_

**BECAUSE OF YOUR CONSTANT ENDEAVOUR FOR IMPROVEMENT DETAILS MAY VARY SLIGHTLY FROM THOSE QUOTED IN THESE INSTRUCTIONS.**

Cod. 354025711 - 04/98

---

ALL SPECIFICATIONS SUBJECT TO CHANGE

Stockton Close, Minworth Industrial Park, Minworth, Sutton Coldfield, West Midlands B76 8DH  
Tel.: 0121/3523500 - Fax 0121/3523510

---