


**ATMOS MONOSOLAR HOT WATER SYSTEM LINKED TO
ATMOS COMPACT COMBI N30K
CONDENSING GAS COMBINATION BOILER.**

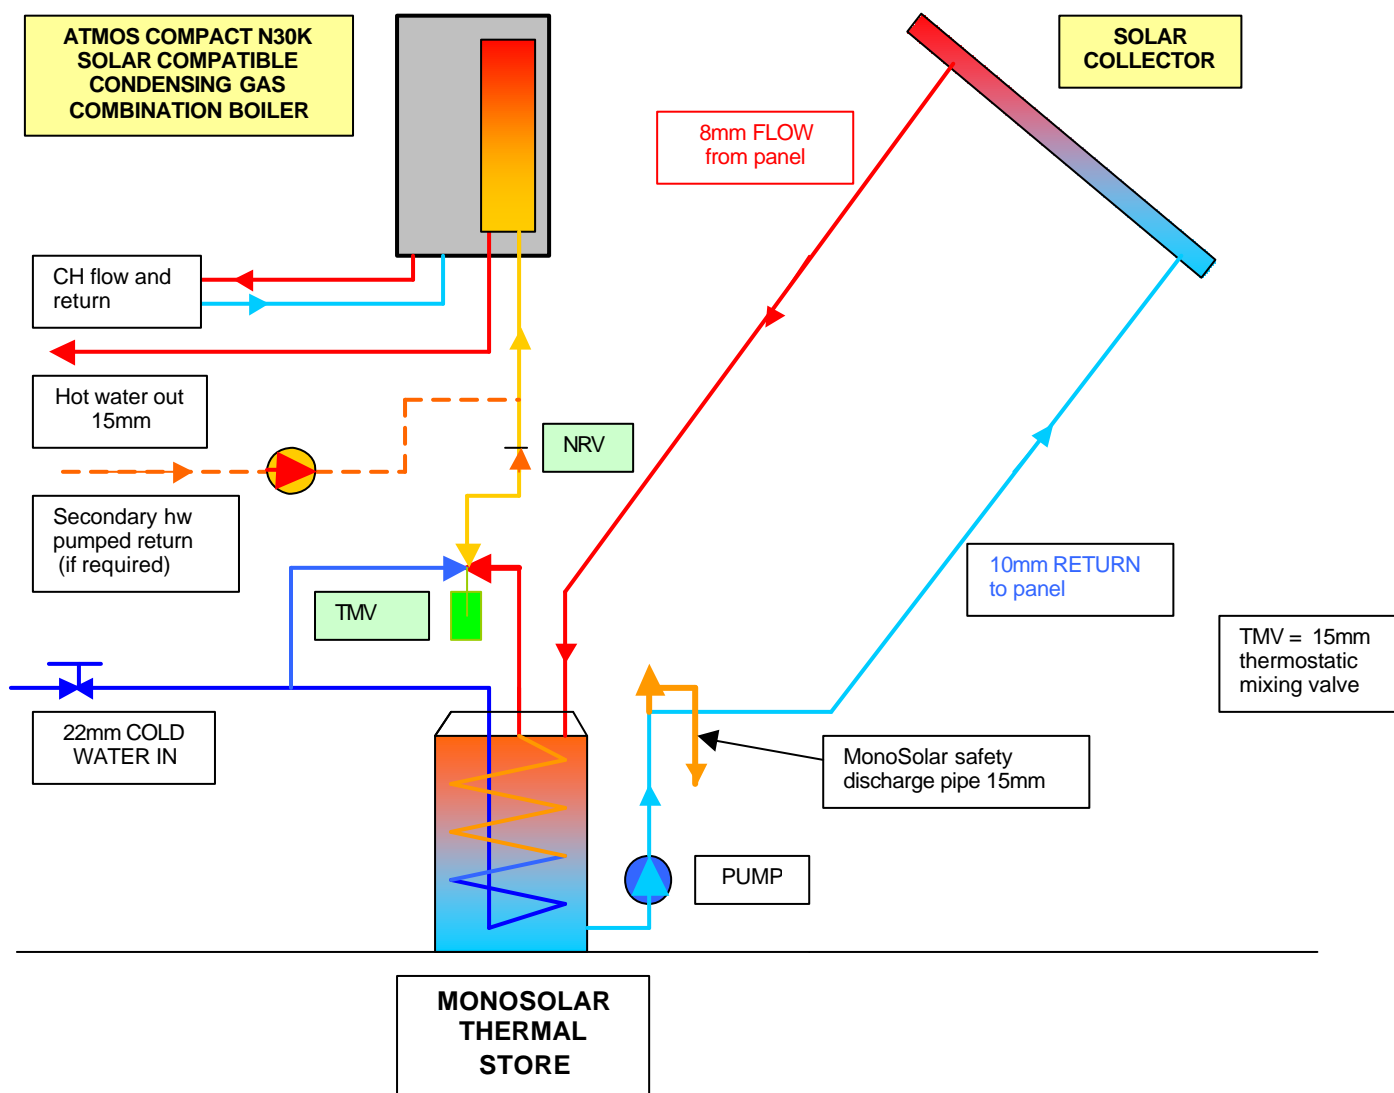

Notes:

- 1) Hot outlet from MonoSolar connects to the cold inlet of the COMPACT boiler via a thermostatic mixing valve set at 60 °C, unless a lower hot water temperature is required. The hot water temp on the Compact should be set no higher than the temperature of the TMV.
- 2) When using a secondary hot water return system, connect as shown. The non-return valve (NRV) must be fitted in the position shown above, leaving at least 150mm of pipe between the NRV and the TMV.
- 3) Cold feed to thermostatic mixer valve should be taken from the 22mm cold supply.
- 4) The 15mm copper safety valve discharge pipes from the boiler and from the MonoSolar can be linked into a